


# 16-058 30LB COUNTERWEIGHT KIT

## INSTALLATION INSTRUCTIONS

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.


<p><b>INCLUDED:</b></p> <p><b>2 x 15lb Weight Sets</b> <b>2 x U-Bolts</b> (m10x80mmx195mm)</p> <p><b>Hardware</b></p> <ul style="list-style-type: none"><li>4 - m10x25mm Flat Washers</li><li>4 - m10 Nylock Nuts</li></ul>		<p><b>TOOLS NEEDED:</b></p> <ul style="list-style-type: none"><li>17mm Deep Well Socket</li><li>19mm Deep Well Socket</li><li>Jack Stands</li><li>Floor Jack</li></ul>
---	---	--

**NOTE:** This kit was designed to fit on both the Yamaha G29/Drive2 and the E-Z-GO RXV Front frames. If desired, two weight kits will fit to the front frames for a total of 60 lbs. The final step will show how two of the 16-058 kits fit on the front frame.

Switch the key to the OFF position and engage the Parking Brake.

Lift front of cart up and place jack stands under front frame.

Remove front tires to gain easier of access to the front frame.

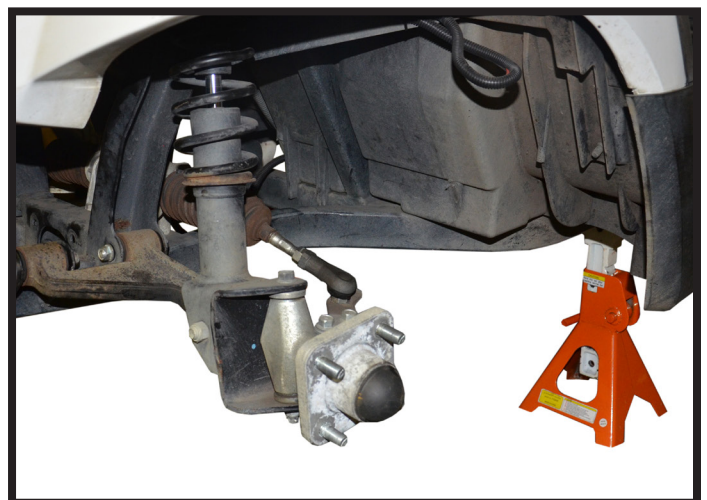

This kit includes two 15 pound weight sets.

For reference, one set includes a U-bolt, hardware, 2 large blocks, and a single plate as shown.




There are two ways to attach the weight sets to the front frame.

**\*\*\*Both weight sets are shown on the same side for comparative purposes only.**

**A)** Two large blocks above frame and single plate below.

**B)** One large block and single plate above frame and the other large block below.

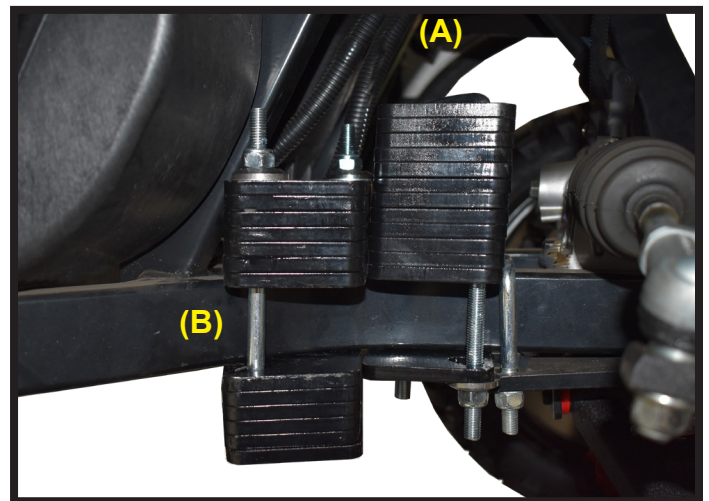

**NOTE:** If you intend to use two 16-058 kits (60 total lbs) on a Yamaha G29/Drive2 you will use the setup shown below on each side of the front frame. For E-Z-GO RXV, you can use either option listed above due to the extra mounting space available vs the Yamaha models.

